




## 82-92 Camaro Reversed Radio Bezel Install

Start by removing your current radio bezel, radio and your hvac controls.

Unbolt the hvac controls from the metal bracket and install the spacers as shown.

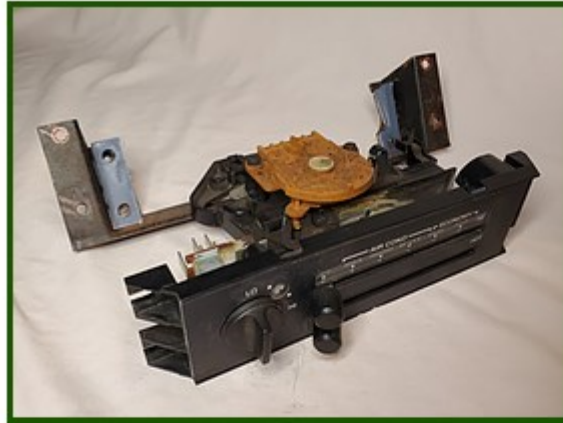

Reinstall the hvac assembly in the lower section, using the 4 bolt locations as indicated. If needed you can elongate the 4 holes in the bracket to move the controls up or down to your liking.



(Illustration shown hvac position without any modification to the metal bracket)



Now to install your radio. I currently do not offer mounting brackets for the radio. Many have used galvanized nailer plates found in hardware stores, others have designed and printed their own radio mounts. Utilize the upper 4 holes to mount your radio.

All that's left is to install your new bezel and enjoy the new look.